

カメラプレート一覧

メーカー	機種	品番
Canon	10D without BG-ED3	2138
	10D with BG-ED3	2133
	D30with BG-ED3	2133
	D30without BG-ED3	2134
	D60 without BG-ED3	2134
	D60 without BG-ED3	2133
	D60 with BG-ED3	2135
	EOS IV with PB-E2	2136
	EOS IV without PB-E2	2136
	EOS 1,1N	2135
	EOS 3 with PB-E2	2136
	EOS 3 without PB-E2	2135
	EOS 1D	2156
	EOS 1Ds	2135
	EOS 1D MII	2135
	EOS 1DS MKII	2135
	Elan A2, A2E	2151
	Elan A2, A2E with VG-10	2152
	Elan 7,7E	2138
	Elan 7, 7E with BP-300	2153
	Rebel, Rebel G, Rebel 2000	2154
	Rebel Ti w/BP 220	2154
	T-70	2138
	T-90	2151
	Digital Rebel, Digital Rebel XT	2159
	Canon 20D/Canon 5D	2138
	Canon 20D with BG-E2	2135
Contax	RTS-3, AX, RX	2138
	645 AF	2150
Fuji	6x7	2137
	6x9	2137
	S602z	2138
	S2	2157
Hasselblad	3/8 -16 (including H1)	2143
	1/4-20.	2144
Leica	R4,R5,R6,R7	2137
	M with or Without M Winder	2148
Mamiya	6, 6mf, 7	2145
	RB,RZ,645 (Not 645AF)	2150
Olympus	Omseries	2137
	E-1	2160
Pentax	LX,MX,MZ-1,ZX5,PZ-1P	2137
	PENTAX 67,67II	2149
Nikon	D70	2138
	F-5	2139
	F-100	2140
	F-100 with MB-15	2141
	D1,D1H,D1X	2142
	D2H, D2X	2158
	N90	2146
	N90 with MB-10	2147
	N80	2138
	N70	2138
	F2, F3, FA, FE, FG, FM	2137
	8008	2138
	8008S	2138
	D100	2138
	D100 with MB-D100	2155
	Pronei 6i	2138



※各カメラに対応しております。詳しくはお問い合わせ下さい。